



1. Klik riba e icon 'Settings'




2. Selecta y klik 'Parental Control'

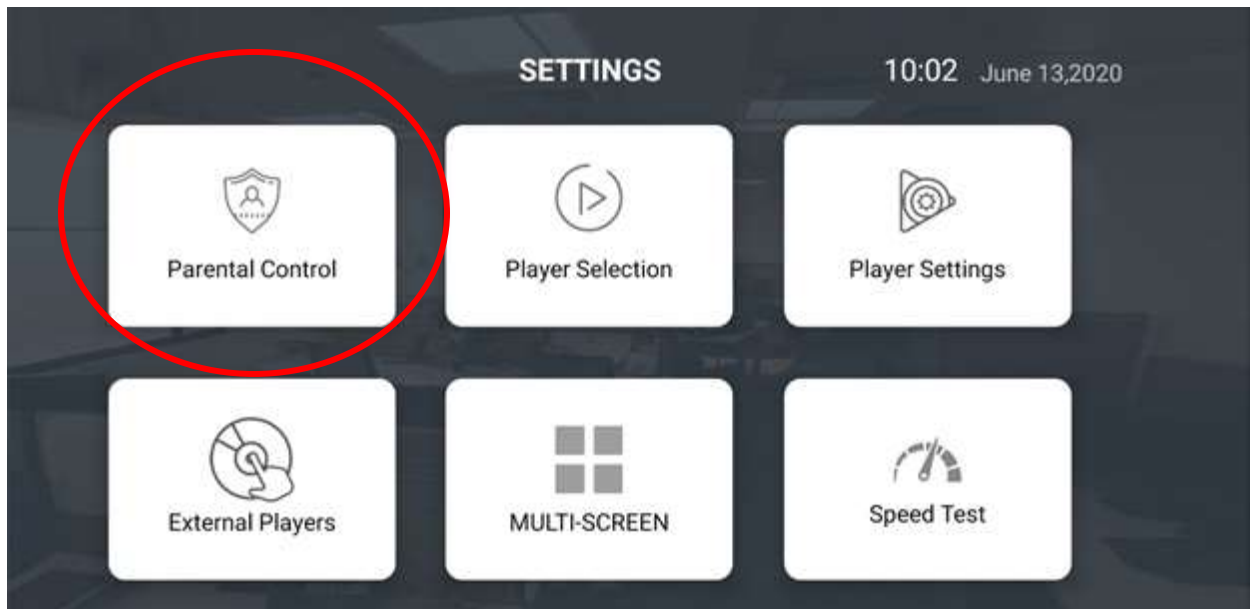


3. Traha bo mesun password y klik e boton 'SAVE'  
(ta HOPI IMPORTANTE pa bo corda bo password)

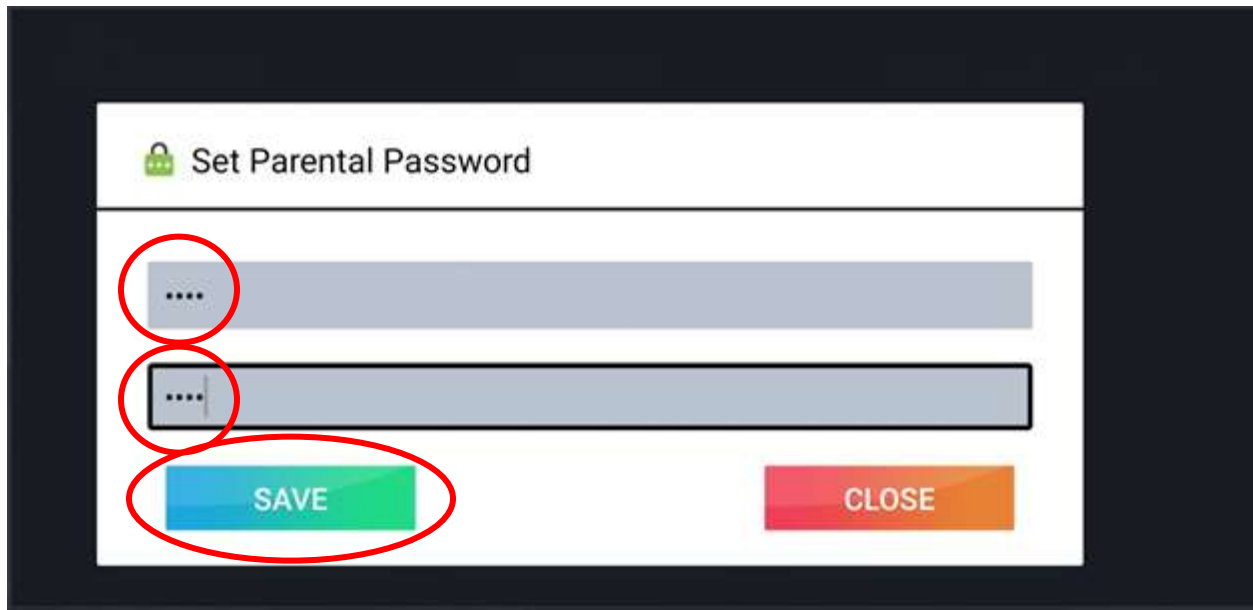

4. Scohe y klik e 'Category' cu bo kier lock por ehempel 'For Adults'  
(por lock TE CU 5 CATEGORIA MAXIMO, sino bo sistema ta blokia y lo no traha mas)

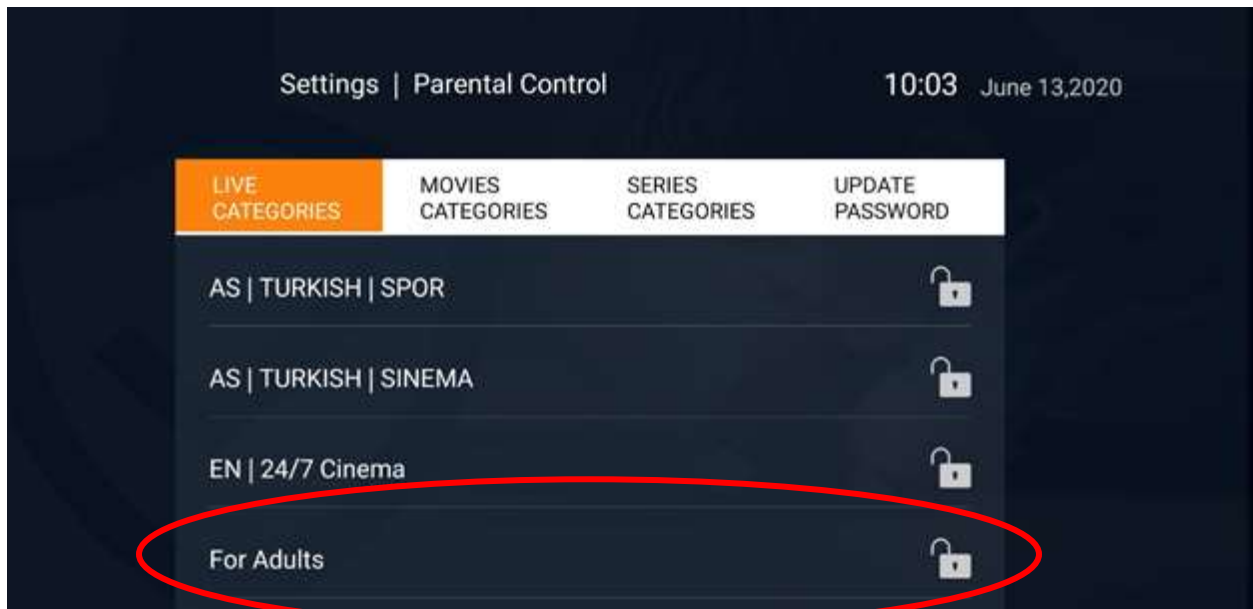

5. Ora e 'Category' a wordo selecta e ta cambia e unlock icon pa locked icon

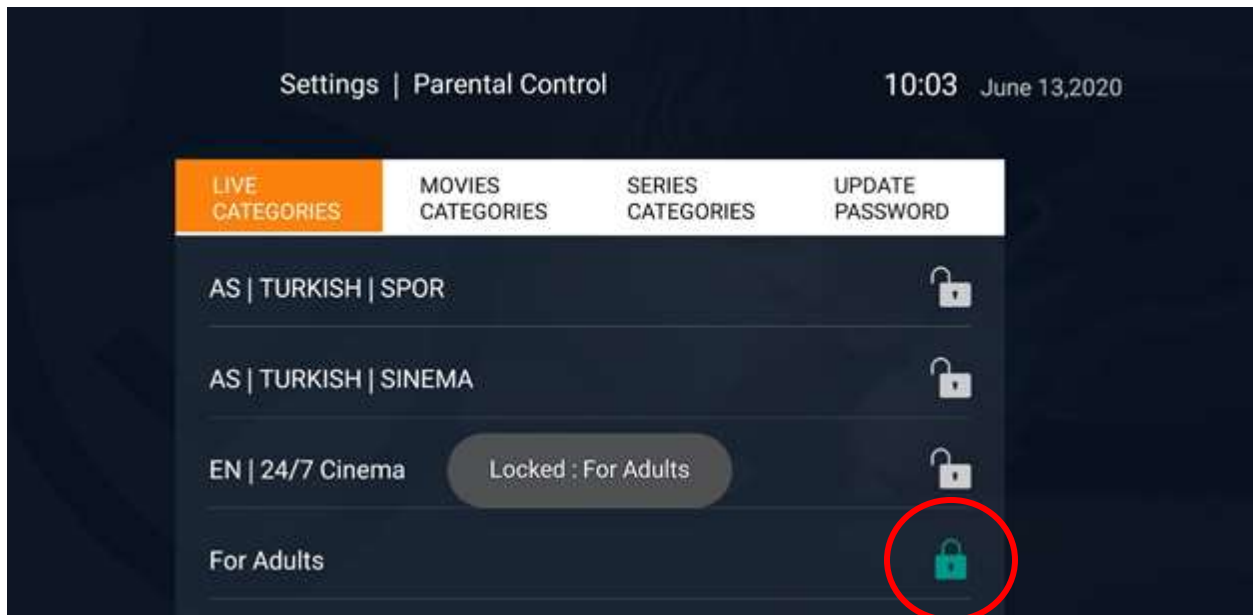

6. E 'Category' ta locked y lo bo no wak e mas den bo lista di categorianan